


## SmartWave™ Kit quick set-up notice

# IMPORTANT

## READ THESE INSTRUCTIONS PRIOR TO INSTALLATION

This SmartWave™ kit is pre-programmed and ready to use, subject to your application:

- Sensors have been PRE-ASSIGNED TO WHEEL POSITIONS and are identified on each unit with a position label (P1, P2, P3 etc.) – install the sensors as per the diagram below.
- Default values have been assigned to each axle for the following:
  - **Cold Inflation Pressure (CIP)** – 100PSI
  - **First Alert Level (FAL)** – set to a deviation of  $\pm 10\%$  from CIP
  - **Second Alert Level (SAL)** – set to -15% from CIP
  - **High temperature alert** (optional) – ITEC specific kits set to OFF, all other kits set to 95°C

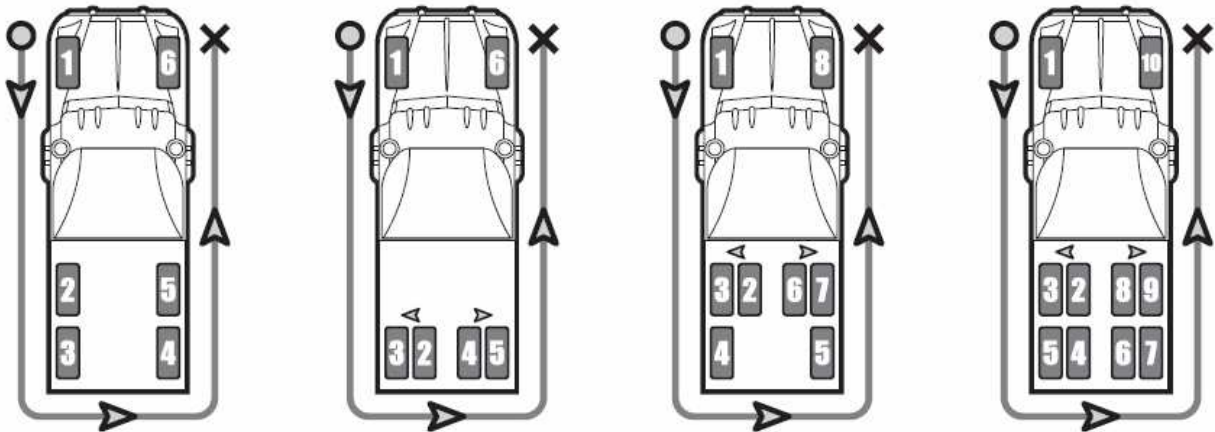

### Installation steps:

1. Install the receiver, display, antenna and harnesses on the vehicle, following the instructions in “**Section C – Installation Electrical**” section of the SmartWave™ manual
2. Install the sensors in the pre-programmed locations as above, following the instructions in “**Section D – Installation Tire Sensors**” section of the SmartWave™ manual
3. Adjust any system parameters as required, following “**Section B – System Programming**” section of the SmartWave™ manual